

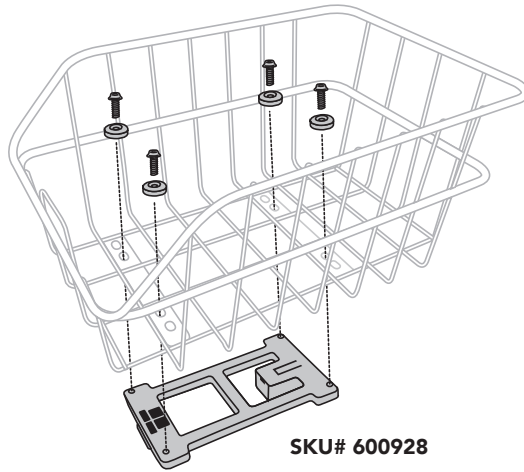


Alloy Wire MIK Rear Basket Install Instructions

Electra

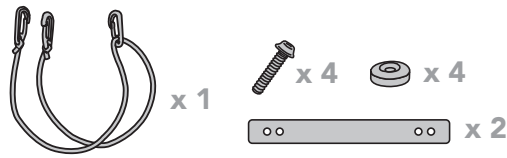

READY

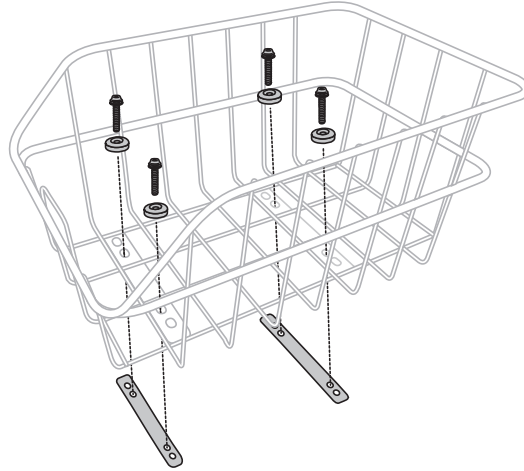